NOVA LUCE

9063609, 9063610
9063611, 9063612

1

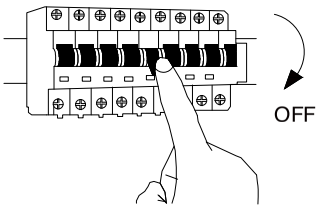

Turn off the general switch

2

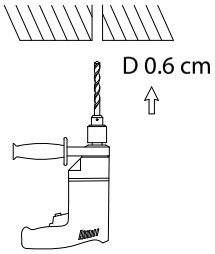

Drill holes with D: 0.6 cm

3

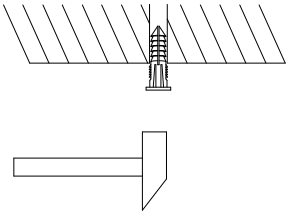

Apply plastic anchors

4

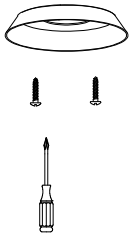

Apply screws
With a screwdriver

5

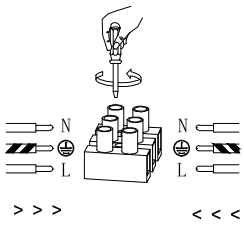

Connect the wires

6

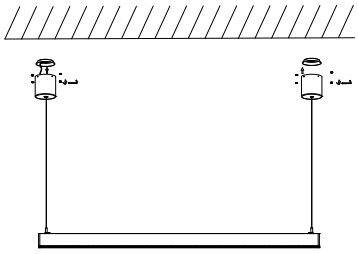

Apply the side screws

7

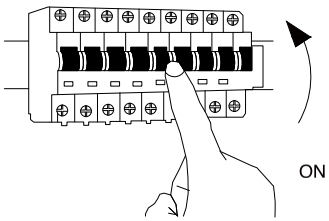

Turn on the general switch

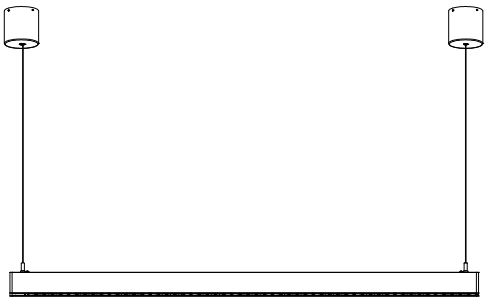

www.novaluce.com